



VISTA CRUISE® YAMAHA INSTALLATION INSTRUCTIONS

Customer Service (616) 532-2357

- **HOLDS THROTTLE AT DESIRED SPEED**
- **EASILY INTALLED – NO GRIP REMOVAL REQUIRED**
- **RELIEVES ARM AND WRIST STRAIN**
- **HELPS ECONOMIZE ON FUEL**
- **ATTRACTIVE – LOOKS LIKE IT BELONGS**
- **THROTTLE CAN ALWAYS BE MANUALLY OPERATED EVEN WITH VISTA CRUISE IN THE “ON” POSITION**
- **MOLDED FROM DURABLE GLASS FILLED ZYTEL® NYLON**

NOTE: VISTA CRUISE fits motorcycles with 7/8" handlebars ONLY.

INSTRUCTIONS

Swing face of VISTA CRUISE away from crown so that there is at least one inch of clearance between face and crown. Pull grip flange back so that the VISTA CRUISE can be inserted between grip flange and switch housing.

Close VISTA CRUISE around sleeve. Install the thumb lever inserting threaded shaft thru face. Then put spring on threaded shaft and put shaft into crown. Be sure the brass adjustment screw is installed into hold at rear of crown with slot facing outward. Put slotted thrust washer between VISTA CRUISE and grip flange. Allow grip flange to go back to normal position.

REPLACEMENT OF RETAINING CLIP (e) *see below

1. Remove the bolt on the underside of switch-throttle assembly nearest cable outlet.
2. Place clip notch (f) around cable with round hole (g) centered over hole of removed bolt, making sure that the retaining clip is secured on top of retaining foot of VISTA CRUISE.
3. Replace the bolt through the retaining clip hole (g) and back into the original hole of the switch-throttle assembly. Tighten.
4. Refer to "Adjustment of VISTA CRUISE."

ADJUSTMENT OF VISTA CRUISE

To adjust, with screwdriver turn adjustment screw (See Diagram A) clockwise for tightening, and counterclockwise for loosening.

To adjust VISTA CRUISE in "ON" (DOWN) position twist throttle to midway point, and press VISTA CRUISE to "ON" (DOWN) position with thumb.


Adjust screw (b) only until throttle remains in midway position.

To check VISTA CRUISE in "OFF" (UP) position twist the throttle to full "ON" and release grip. Throttle spring should release the throttle to "OFF" position.


To check VISTA CRUISE "MANUALLY OVERRIDE" with thumb press VISTA CRUISE to "ON" (DOWN) position. Twist throttle back and forth to full "ON" – full "OFF," three to four times. Should there be tight spots, recheck your installation and adjustment. (When operated manually in the "ON" position, the throttle will not shut down when grip is released.)

Occasionally remove the VISTA CRUISE and wash with a mild detergent in lukewarm water.

* (e) Single Cable Clip

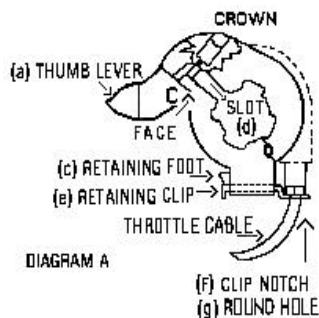

* (e) Dual Cable Clip

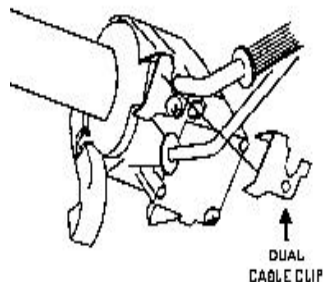

RETAINING CLIP INSTALLATION

For Dual Cable Yamaha
(Single Cable instructions on package back)
Follow instructions on package back up to "Replacement of retaining clip." Then proceed with instructions below.

1. Remove screw from saddle bracket. (The bracket that holds the outside throttle cable in place).
2. Hold saddle bracket in place and install the dual cable clip over it as pictured in drawing on reverse side.
3. Replace screw through both brackets and into the switch-throttle housing and tighten.
4. Go to "Adjustment of Vista Cruise on package back."